


# Installing Non-Grounded Metal Contactor

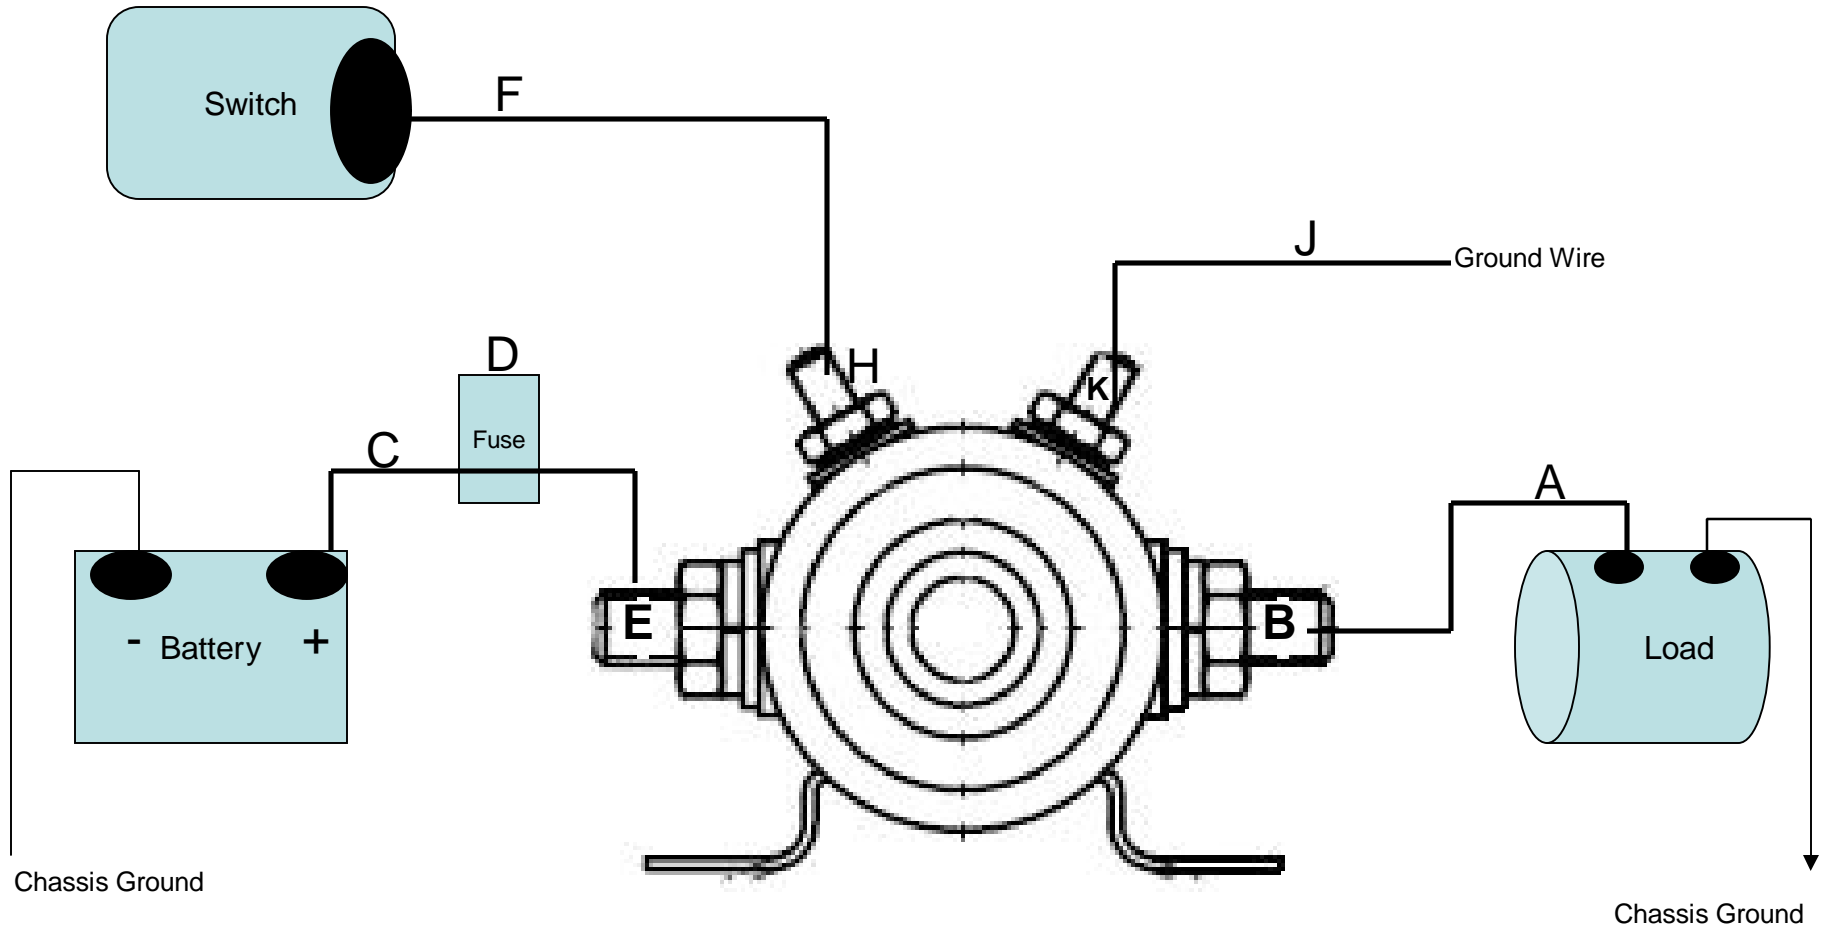

## Mounting Instructions

1. Select a desired mounting location
2. Using the contactor as a template, mark the centers of the mounting holes.
3. Using a drill bit, drill the holes marked in the previous step.
4. Mount the contact using bolts and nuts.
5. Wire the relay according to the wiring diagram

## Wiring Diagram

1. Connect Load (A) to High Current stud (B)
2. Connect battery positive (C) to fuse (D)
3. Connect fuse (D) to High Current stud (E)
4. Connect Switch (F) to Coil stud (H)
5. Connect Ground Wire (J) to Coil stud (K)